



- NOTES:
1. PROGRAMMING: MACRO = HVAC HAND-AUTO
 2. DASH LINES INDICATE CUSTOMER INSTALLED DEVICES AND WIRING
 3. COPPER WIRE RATED FOR 60°C INSULATION IF RATED LESS THAN 100A OR 75°C IF RATED 100A OR MORE MUST BE USED.
 4. REFER TO USER MANUAL FOR OPERATION, CONNECTIONS AND TIGHTENING TORQUE VALUES.
 5. FUSE RATING LABEL IS NEAR DEVICE.
 6. CUSTOMER REQUIRED TO PROVIDE BRANCH CIRCUIT PROTECTION AND DISCONNECT MEANS PER NEC AND LOCAL CODE.

Rev	Description	Date	Appd	Description	Project Name	Approved	Checked	Prepared	Responsible	Dept.	SLS_ENG	Date	Reference number	Document number	Sheet
				R3-R4 ACH550 E-BYPASS POWER_WIRING_DIAGRAM	CIRCUIT_BREAKER SERVICE_SWITCH	MAM							SUBMITTAL	3AUA34VCBC37PW	C
Based On															D